

- ⚡-L1-N Mains voltage
- Watch! Phase sensitive
- 1-3 Lockout input
- 4-5 Boiler enable
- 6-7 Direct hot water sensor
- 8-9 External influence 0-5V
- 10-11 Scm bus
- 12-13 PWM pump


Thermostat
see optie
05S3000E02

or
DHW
sensor

External
influence
0 - 5V

- *1 By connection remove jumper.
- *2 Optional, for order see parts list.
- *3 Along with option weather compensated regulation.

| | | | | | | | |
|---|-----------------|---------------------------------------|--|--|---|----------|---------------|
| A | 01-12-2003 R.L. | Wiring diagram Serie R30 type 65 - 85 | | | DAT. 18-11-2003 GET. R.L. GEC. E.H. | B3065E02 | Page 1 - 2 |
| B | 24-11-2004 R.L. | | | | A | B | C |
| C | 13-01-2005 R.L. | | | | | | |

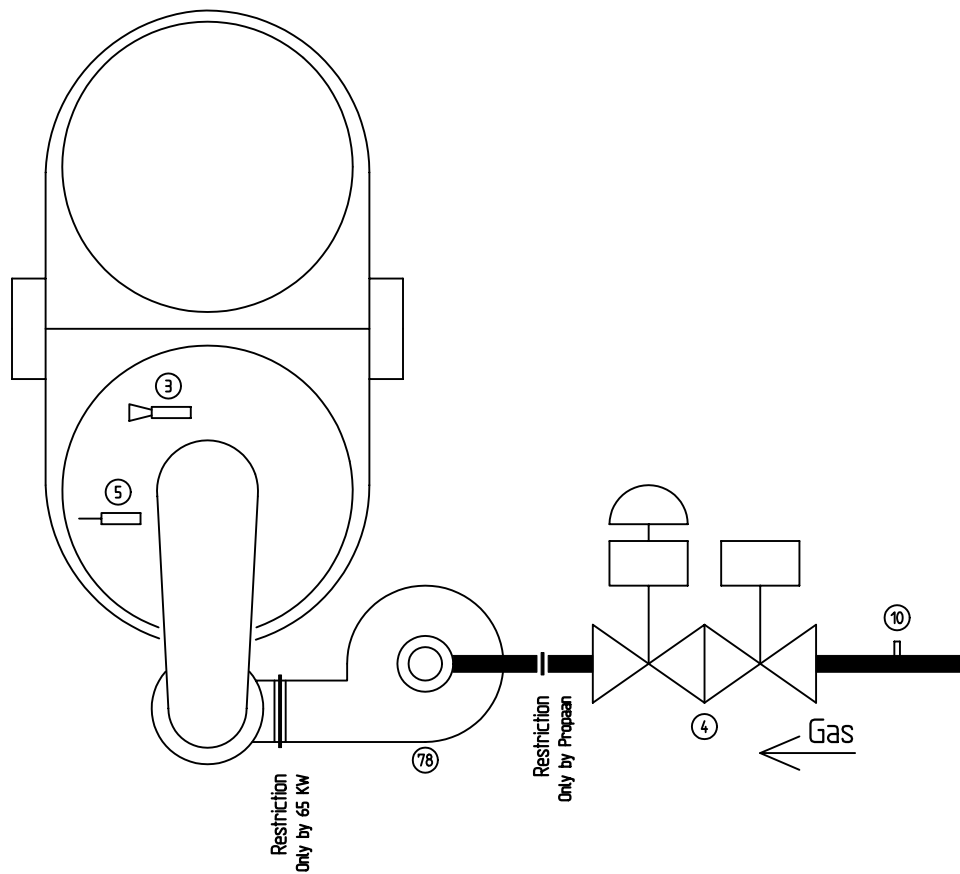

| | | | | | |
|---|-----------------|----------------------------------|-----------------|----------|-------|
| A | 01-12-2003 R.L. | Gas train Serie R30 type 65 - 85 | DAT. 18-11-2003 | B3065E02 | Page |
| B | 24-11-2004 R.L. | | GET. R.L. | | 2 - 2 |
| C | 13-01-2005 R.L. | | GEC. R.L. | | A B C |
| | | | | | |
| | | | | | |
| | | | | | |